



2400W

ELECTRIC FRY PAN



INSTRUCTION MANUAL

220-240V

2000W ~ 2400W

WHEF01G



CONTENTS

SAFETY INFORMATION

Important Safety Instructions	1 - 2
Electrical Requirements	3

SETUP AND USE

Installation Guide	3
Parts and Features	4
Temperature Control Probe	4
Operating Instructions	5
Cooking Temperatures & Times	6

CLEANING AND CARE	8
--------------------------------	----------

TROUBLESHOOTING.....	9
-----------------------------	----------

WARRANTY	10 - 11
-----------------------	----------------

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

Product design and specifications may be changed without notice.

IMPORTANT SAFETY INSTRUCTIONS



DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death.



WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death.



CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury.

WARNING

The temperature of accessible surfaces may be hot whilst the electric frypan is operating.

1. Read all instructions carefully before using your new frypan.
2. Always turn the power off at the power outlet before you insert or remove the power plug. Remove by grasping the plug - do not pull on the cord.
3. Do not touch the outer surfaces whilst frypan is in operation. Use handles and knobs only, as some surfaces may become hot whilst the appliance is in use.
4. Do not operate frypan if:
 - i) the cord or plug is split, melted or damaged.
 - ii) the frypan has malfunctioned.
 - iii) the frypan has been damaged in any manner.If any of the above incidents occur, return your frypan to the nearest authorised service center for examination, repair or adjustment.
5. This frypan is not intended to be operated by means of an external timer or separate remote-control system.
6. Wait for the frypan to cool before moving. Carry only by the outer side handles.
7. Close supervision is necessary when any appliance is used by or near children.
8. Clean the outer surfaces with a soft damp cloth only after unplugging the frypan from the mains supply.
9. Any appliance that has been dropped or damaged should not be used until examined by an authorised service center.
10. Do not permit the mains supply cord or plug to touch hot objects or allow the power cord to lay across the frypan.
11. If the mains supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
12. This appliance is deemed for use indoors only.
13. Do not use harsh or abrasive cleaning agents. The outside surface may be wiped clean with a soft, damp cloth and dried thoroughly. If necessary, a mild dishwashing detergent may be applied to the cloth but not directly applied to the frypan.

IMPORTANT SAFETY INSTRUCTIONS

14. Do not under any circumstances immerse the power cord, mains plug or temperature control probe in water or any other liquid.
15. This frypan can be used by children aged from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the frypan in a safe way and understand the hazards involved.
16. Children should not play with the frypan.
17. Keep the frypan and its cord out of reach of children less than 8 years old.
18. Your frypan should not be unattended while in use.
19. This frypan should not be used in a commercial environment such as a restaurant, hotel or hostel dining room.
20. Always use this frypan with a power outlet of the voltage (A.C. only) marked on the base of the frypan.
21. Do not use frypan for any purpose other than its intended use.
22. Do not place your frypan on or near a hot gas flame, electric element, heated oven or any hot surface.
23. Do not place your frypan on top of any other appliance.
24. Do not allow the power cord of this frypan to hang over the edge of a table or bench top.

ELECTRICAL REQUIREMENTS

POWER SUPPLY CORD

1. Do not attempt to modify the power cord or plug in any way.
2. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
3. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman install an outlet near the appliance.

NOTE: Neither Westinghouse nor the retailer can accept any liability for damage to the product or personal injury resulting due to failure to observe the electrical connection procedures.

INSTALLATION GUIDE


1. Carefully unpack your electric frypan.
2. Carefully remove packaging around the frypan and power cord. Do not remove warning labels.
3. Wash the frypan and lid before use. Ensure temperature control probe is removed before washing.

NOTE: Do not under any circumstances immerse the temperature probe, mains cord or mains plug in water or any other liquid.

PARTS AND FEATURES



1. Tempered glass lid allows viewing and monitoring of foods without the need to lift the lid.
2. Integrated pouring spout makes for easy pouring of sauces or excess fluids.
3. Cool touch handles and knobs keep hands and fingers cool.
4. Heavy duty non-stick stone finish coating is durable and easy to clean.
5. Quick detach trigger release temperature control probe maintains a steady and consistent temperature via the integrated thermostat.
6. Cast in heating elements distribute heat evenly.

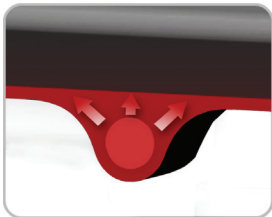

TEMPERATURE CONTROL PROBE



FEATURES AS FOLLOWS:

1. Trigger release for easy removal.
2. Temperature selector
3. Built-in thermostat

NOTE: The light on the control probe will illuminate and will remain on until the set temperature is reached. It will then cycle on and off throughout cooking, as the temperature is maintained by the thermostat. On initial heating of the frypan, it is recommended that the temperature be allowed to cycle (the light cycling on and off) several times. This will help the cooking surface to adjust to a more accurate cooking temperature.

TRIGGER RELEASE CONTROL PROBE

The probe is thermostatically controlled and incorporates an indicator light which switches off automatically when the temperature selected has been reached and then cycles on and off to indicate that the selected temperature is being maintained.

OPERATING INSTRUCTIONS

1. Before first use, the frypan must be cleaned. Ensure the temperature control probe is not attached to the frypan during the cleaning process. Wash your frypan and lid with hot water and mild detergent. Rinse with fresh water and dry thoroughly. Your frypan is now ready for use.
2. Season the cooking surface by applying a thin coat of cooking oil and rub in with paper toweling.
3. Insert the control probe into the inlet on the side of the frypan.
4. Plug the power cord into the power outlet and turn on.
5. Set the temperature control probe to the desired temperature setting.
6. **WARNING:** Do not place extremely cold / frozen foods or liquids into a hot frypan as it may result in excessive steam, spitting and spattering causing personal injury.

COOKING TEMPERATURE & TIMES

ITEM	TEMP	TIME
Bacon	150 - 160°	10 - 12 min
Baking, Cake	120 - 150°	25 - 40 min
Braising	90 - 110°	45 - 60 min
Browning	160 - 200°	5 - 10 min
Casserole	90 - 110°	60 - 90 min
Chicken Pieces	160 - 180°	40 - 60 min
Eggs, Fried / Scrambled	120 - 135°	2 - 5 min
Fish	160 - 180°	5 - 10 min
French Toast	130 - 150°	4 - 6 min
Hamburgers 2.5cm thick	160 - 180°	10 - 14 min
Hamburgers 1.5cm thick	160 - 180°	5 - 7 min
Liver	160 - 170°	6 - 10 min
Pancakes	180 - 200°	2 - 3 min
Pork Chops, 2.5cm thick	160 - 180°	20 - 25 min
Pork Chops, 1.5cm thick	160 - 180°	15 - 20 min
Roast Beef (1.5kg)	160 - 180°	60 - 90 min
Roast Pork (1.5kg)	160 - 180°	120 - 150 min
Roast Chicken (1.5kg)	160 - 180°	120 - 150 min
Sausages	140 - 160°	15 - 25 min
Steak: Beef Minute Steak	190 - 210°	2 - 4 min
Steak: Beef 2.5cm thick - Rare	180 - 200°	5 - 7 min
Steak: Beef 2.5cm thick - Medium	180 - 200°	8 - 10 min
Steak: Beef 4cm thick - Rare	180 - 200°	7 - 10 min
Steak: Beef 4cm thick - Medium	180 - 200°	12 - 15 min
Stewing, Varied	90 - 120°	60 - 90 min



Westinghouse

Fantastic recipes for this product and many other Westinghouse appliances can be found under the recipe section at:

www.westinghousesmallappliances.com.au

CLEANING & CARE

1. Medium and low heat settings will yield the best results for most types of cooking. Heating the frypan gradually will ensure even heat distribution. Do not use your frypan on maximum temp settings as this will shorten the life of the non-stick coating.
2. Do not allow your frypan to boil dry as this may cause damage to the non-stick surface.
3. The frypan is suitable for use with wood, nylon and plastic utensils. Do not use steel utensils as they may scratch the non-stick surface. Scratching of the non-stick surface is not covered by warranty.

CLEANING

1. Allow the frypan to cool thoroughly after using. Exposing your frypan to water whilst hot may cause warping and/or damage.
2. Once cooled, filling the frypan with water and allowing it to soak will assist in the removal of tough baked on particles.
3. When washing, non-abrasive cloths and plastic bristle kitchen brushes may be used to remove stubborn food particles from your frypan. Do not use abrasive cloths and cleaning materials as they may damage the non-stick surface.
4. The Frypan and lid are fully immersible and can be washed in warm soapy water using a mild household detergent and a soft washing sponge. For added convenience, they can also be cleaned in the dishwasher.

WARNING: Do not place the temperature control probe in the dishwasher.

5. Ensure both probe and frypan are completely dry before inserting probe into frypan for use.
6. Should your frypan require cleaning of stubborn stains and build-up, the following method is recommended:

*****Combine: 2 tablespoons bicarbonate of soda and 2 teaspoons water*****

- i). Pre-heat the frypan for approximately 1-1.5 minutes on setting 150 degrees celcius.
 - ii). Turn the power OFF at the power outlet, remove the plug from the power outlet and remove probe from frypan.
 - iii). Brush the above paste solution onto the non-stick surface and allow to stand for one hour.
 - iv). Wash the frypan in warm soapy water using a mild household cleaner and a soft washing sponge.
7. Ensure frypan is dried thoroughly and stored in a dry place away from steam and humidity where possible.

TROUBLE SHOOTING

BEFORE CALLING FOR SERVICE

If the frypan fails to operate:

1. Make sure the frypan is plugged in correctly and securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it back in securely.
2. Check for a blown or tripped circuit breaker in your home. If these seem to be working correctly, test another appliance in the same outlet to ensure the outlet is working correctly.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, DO NOT TRY TO ADJUST OR REPAIR THE FRYPAN YOURSELF.

CUSTOMER SERVICE

In the event you believe your frypan to be defective, please return it along with your sales receipt to the place of purchase for resolution.

For any enquiries, please call our service center on: Tel: 1300 883 109

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the frypan still does not operate correctly, it may be defective.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Frypan does not turn on.	Frypan is not plugged in.	Check that frypan is plugged into a working power outlet and turned on.

LIMITED WARRANTY

1. Nothing in this Warranty affects the Consumer's rights under the Australian Consumer law. The benefits to the Consumer under this Warranty are in addition to the rights and remedies of the buyer under any Consumer Guarantees. The Australian Consumer Law requires that we confirm that:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. Subject to Clause 1, the Seller warrants that Westinghouse branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this Warranty extends only to the owner of the property in which the Products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty Period.
4. The Warranty commences on the date of the purchase of the product and continues for the benefit of the Owner for the Warranty Period. If within the Warranty Period a manufacturing defect is discovered in the Product, or the Product fails to perform to the Seller's specifications as a result of some defect in material or workmanship in the Product, then the Seller will at its own discretion:
 - a.) Repair or replace the Product at the cost of the Seller, including but not limited to labour and travel costs. Goods repaired or replaced under this Warranty will be warranted for the remaining period of the Warranty.
 - b.) Refund the purchase price paid by the consumer.
5. The Warranty does not apply to Product that :
 - a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
 - b.) Has been misused or neglected.
 - c.) Has been damaged accidentally or by acts of God including fire and flooding.
 - d.) Has been used or operated contrary to operating or maintenance instructions.
 - e.) Has been damaged by the Consumer or a third party authorised to act for the consumer in transit from the Sellers store to the Consumer.
6. In order to make a claim under the Warranty, the Owner must, where possible return the goods to the Seller's store at the Owner's cost. Proof of purchase must be supplied in all cases.
7. The seller will examine any returned Products and if the Seller determines that there is an apparent defect through no fault of the Owner, the Seller will:
 - a.) Make note of the Owner's contact details including the Owner's telephone number which the owner can be contacted during business hours, postal address and e-mail address.

- b.) Make note of the defects reported by the Owner.
- c.) Take back the defective goods from the owner and determine within a reasonable time through dialogue with the Seller whether the goods are defective.
- d.) Advise the owner within a reasonable time frame whether it accepts or rejects the Product claim.
- e.) If the Seller accepts the return of the Product, the Seller must arrange to have
 - i) The Product repaired or,
 - ii) Replace the damaged or faulty Product or,
 - iii) Refund the purchase price.
- 8. The Seller will not accept any returned Product which has not been returned strictly in accordance with this Warranty.
- 9. For the purpose of this Warranty:
 - a.) Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010 (Cth).
 - b.) Consumer means the Purchaser of goods from the seller.
 - c.) Consumer means a Consumer as that term is set out in section 3 of the Australian Consumer Law.
 - d.) Consumer Guarantees means the guarantees under the Australian Consumer Law.
 - e.) Implied terms means any guarantees, conditions, warranties or other terms implied by any Australian Commonwealth, State or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.
 - f.) Owner has the meaning set out in clause 3.
 - g.) Warranty means this warranty.
 - h.) Product means the Product/s bought by the Owner from the Seller that fall under this warranty.
 - i.) Warranty Period means:
 - i) In relation to Cast Iron Cookware: 3 Year Limited Warranty.
 - ii) In relation to Non-Stick Cookware: 3 Year Limited Warranty
 - iii) In relation to Cooking Utensils: 3 Year Limited Warranty
 - iv) In relation to Knives/Knife Block Sets: 3 Year Limited Warranty
 - v) In relation to Stainless Steel Cookware: 10 Year Limited Warranty
 - vi) In relation to Chopping boards: 1 Year Limited Warranty
 - vi) In relation to Small Appliances: 1 Year Limited Warranty



Westinghouse

INNOVATION YOU CAN BE SURE OF

CUSTOMER SERVICE - 1300 883 109

IMPORTED AND DISTRIBUTED BY RVM AUSTRALIA PTY LTD.
11 Tamara Drive, Cockburn Central, WA 6164
MADE IN CHINA

© 2015 RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.

®, WESTINGHOUSE, and INNOVATION YOU CAN BE SURE OF
are trademarks of Westinghouse Electric Corporation.

Used under license by RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.